




### Drapery Installation Instructions – Bay Window Set

Congratulations on your purchase of drapery hardware from Texas Iron and Interiors. We believe you have made the best decision on quality and beauty available in drapery hardware today.

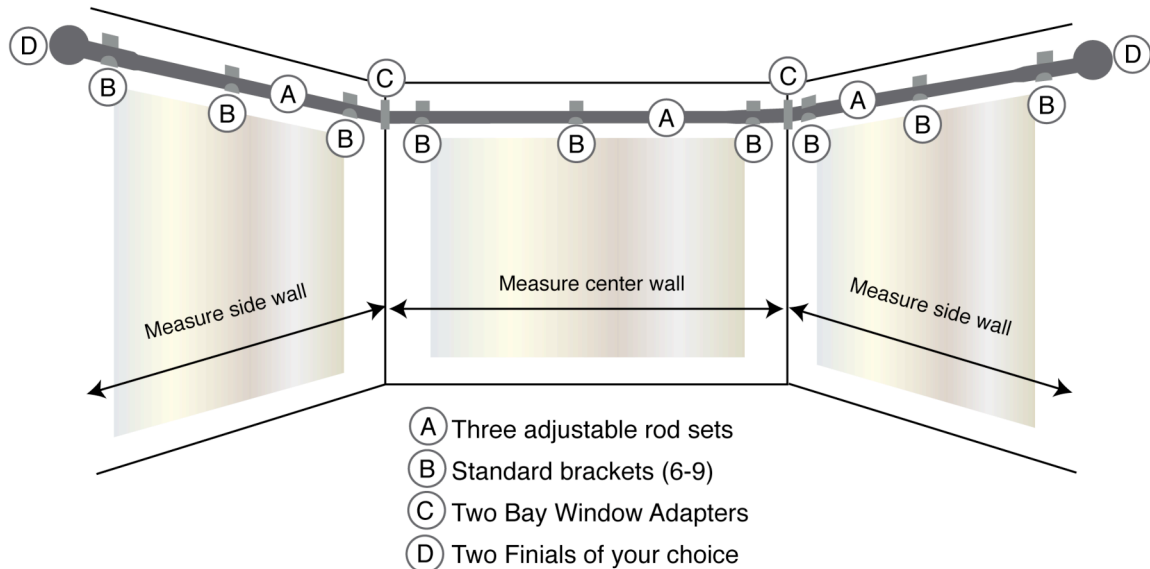

#### Parts Included in Model #4450 Bay Window Set:

- Three adjustable drapery rod sets
- Standard brackets (6-9) depending on size of windows specified. Small rod sets come with 6 brackets. Medium and large rods come with 9 brackets so you will install one more bracket in the center for those sizes.
- Two Bay Window Adapters
- Two Finials of your choice
- Screws (customer must provide appropriate wall anchors or toggle bolts)

To install our hardware into a bay window, please follow these simple steps:

1. Complete equation below for exact bracket installation height from floor. Hang brackets at the height noted below, using a level. Brackets should be placed over the outer edges of the window for correct support of the rods. On medium and large rod sets, place additional bracket in center of window. Bracket measurement is from the flat, horizontal arm of the bracket. Hold in correct place and mark screw holes with a pencil.

$$\text{Drapery Length: } \underline{\hspace{2cm}} + \text{ Ring size* : } \underline{\hspace{2cm}} = \text{ Bracket height from floor}$$

\* Ring sizes vary, remember to include the extra height if using drapery clips. Measure tab top draperies from top of tab to floor length of drapery.

2. Install drapery rods per drawing. Ends with screw inserts for the finials should be on the outside of the bay window system. Set screw holes are pre-drilled in brackets if you feel you need to use



them. If you do, you will need to drill a small hole through the hole in the bracket into the rod. Secure screw in place. It is not necessary to use set screws if rods do not move once you have installed drapes, so you may want to wait until drapes are hung to decide on using set screws.

3. Slide rings onto rods.  
Rings per rod (order separately): \_\_\_\_\_
4. Insert bay window adapters into open ends of rods at the “bend” in each wall. you will receive two bay window adapters that will connect your rods at each bend in the wall.
5. Screw finials into place.
6. Hang drapes.
7. Enjoy! If after hanging drapes you feel you need assistance in traversing them open and closed, we carry drapery wands to help ease the drapery panels open and closed without handling the fabric.